

Bed Installation and Set up Guide

Delivery personnel, please read this and follow instructions

1 Remove bed from plastic bag and box. Install legs by screwing them into the holes on the metal frame under the bed.



2 Find Remote and install batteries



3 Make sure the frequency on the remote is the same as on the control box. Control box is found under the bed.

6 Pin Frequency



Control Unit

4 If installing two beds together, each with its own remote control, make sure that bed A remote and control box are set to one frequency, and bed B remote and control box are set to another frequency.



ELECTRONIC & COMPONENTS

- (A) Mattress Retainer Bar
- (B) Legs
- (C) Remote Control
- (D) Transformer
- (E) Power Cord
- (F) Battery Back Up Pack
- (G) 2 Bed Connecting Strap
- (H) Warranty Card
- (I) Input Power Cord

6 Plug power cord tightly into transformer box.



8 Plug input power cord into short transformer cord.



7 Plug input power cord into control box under the bed.



9 Plug bed into power outlet



10 Slide mattress retainer bar into brackets and secure clips.

Mattress Retainer Bar



Pin and Brackets

11 Test all functions on remote control

