



FOR  
WH1 & WH2


# 3" LEG EXTENDER INSTALLATION



3" leg extenders with bolt.



Remove existing leg from bed.

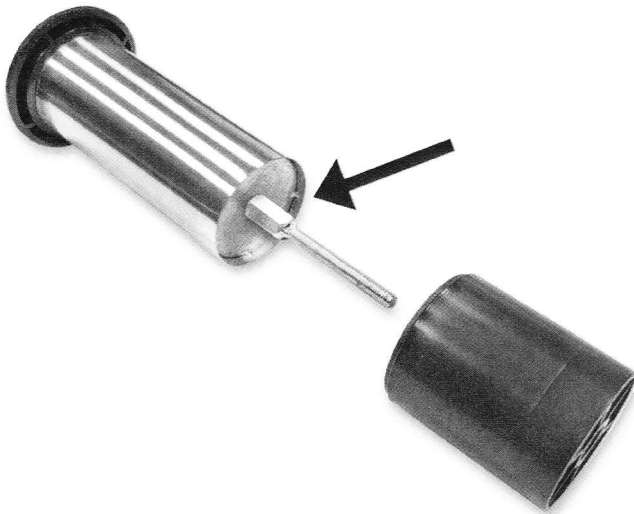

Screw extender bolt into existing leg.



Slide plastic extender onto bolt  
and reattach leg to bed.